



Installation Instructions

ITEM NO.: SH-BR-627

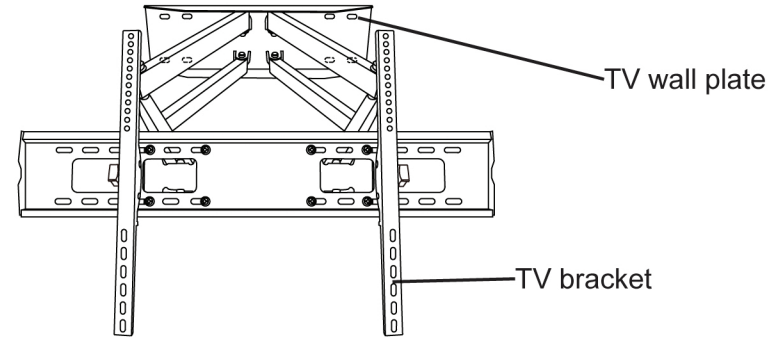


PART	DESCRIPTION	QUANTITY
A	Screw St6×48	4
B	Anchor 10×48	4
C	∅8.5x17x10 Spacer	4
D	Screw M6×20	4
E	Screw M8×20	4
F	Bolt M6×12	2
G	Plastic Knob M35x7	2
H	Level	1
I	Screw M5×40	2
X	∅6.5x18x1.0 Washer	4
Z	∅8.5x18x1.0 Washer	4

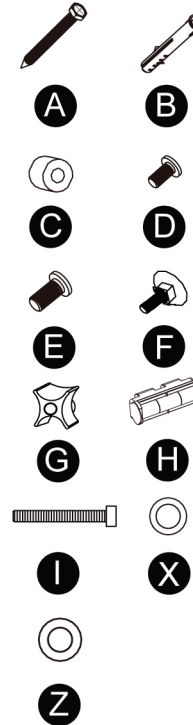


WARNING


1. Tighten screws firmly, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding power.
2. Make sure that mounting screws are anchored into the center of the studs. Use of "edge to edge" stud finder is highly recommended.

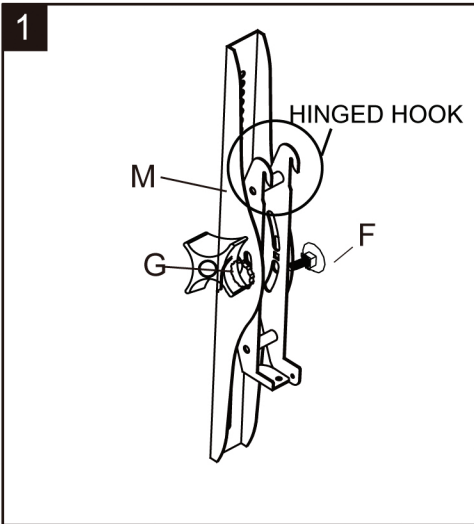

Put the plastic knob(G) on the hole of hooks, and tighten it with the Bolt(F).

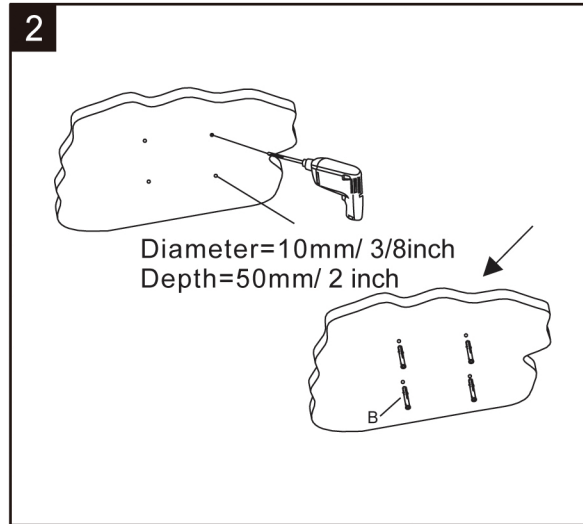

Use the wall plate template to determine the proper location to drill holes for the wall plate. Drill the determined holes on the wall, then put the 10×48 Anchor(B) in the holes.

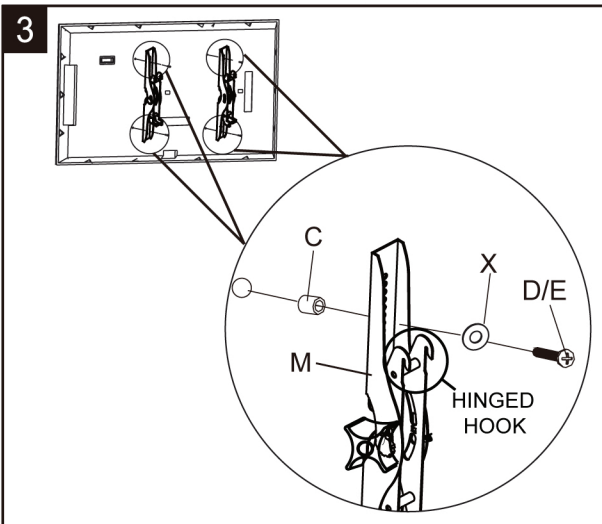

Place TV bracket, flat side down, on the back of the TV. The hinged hook must be towards the top. Place spacers (C) and washer (X) between the TV back and the TV bracket. Attach TV bracket to TV using either screws (D,E, depending on TV brand).

WARNING: Screws D,E have different thread sizes. Choose proper screw. Do Not force into TV.




55"-100"



800×500mm



30kgs
/66lbs

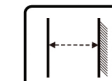

110~450mm





+15°~-15°



+80°~-80°


4

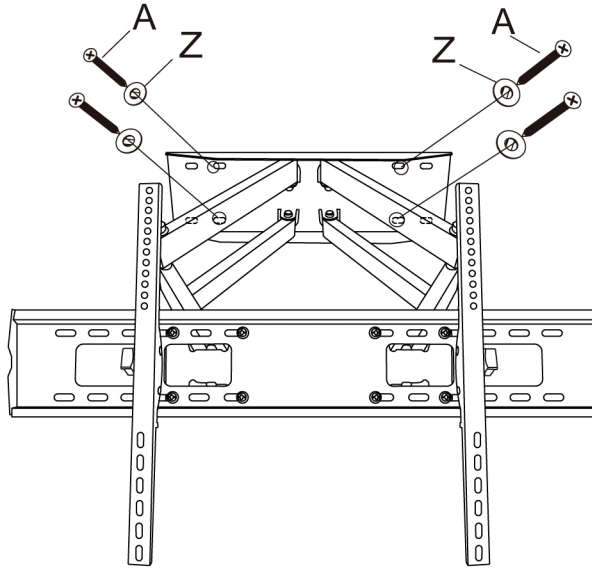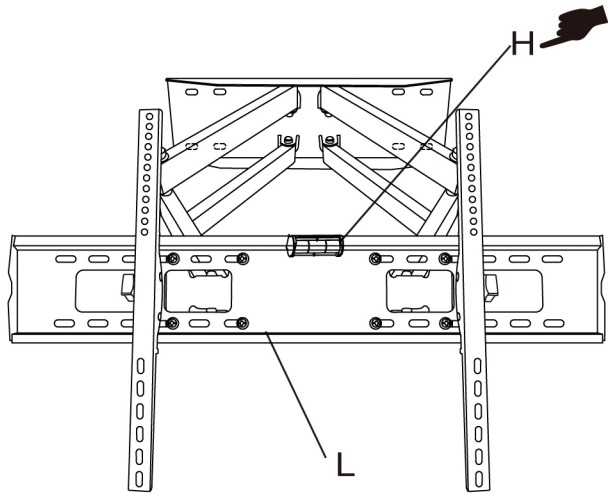

Position the wall plate so mounting holes line up with wall studs. Put level (H) on the top edge of the wall plate to make sure the wall plate is level. Attach wall plate to wall using screws (A) and washers (Z).

5

Mount TV with TV hooks onto the wall plate, then lock the TV bracket by tightening Screw(I). You can adjust the TV at $+15^{\circ}$ ~ -15° by loosening the plastic knob(G), after you confirm the TV angle is ok, please tighten the plastic knob(G) again.

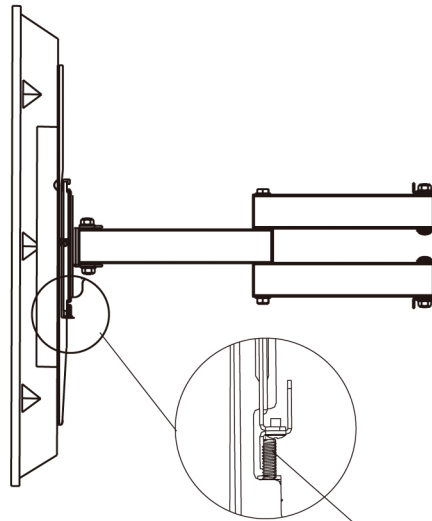

Please tighten the screw(I)

